


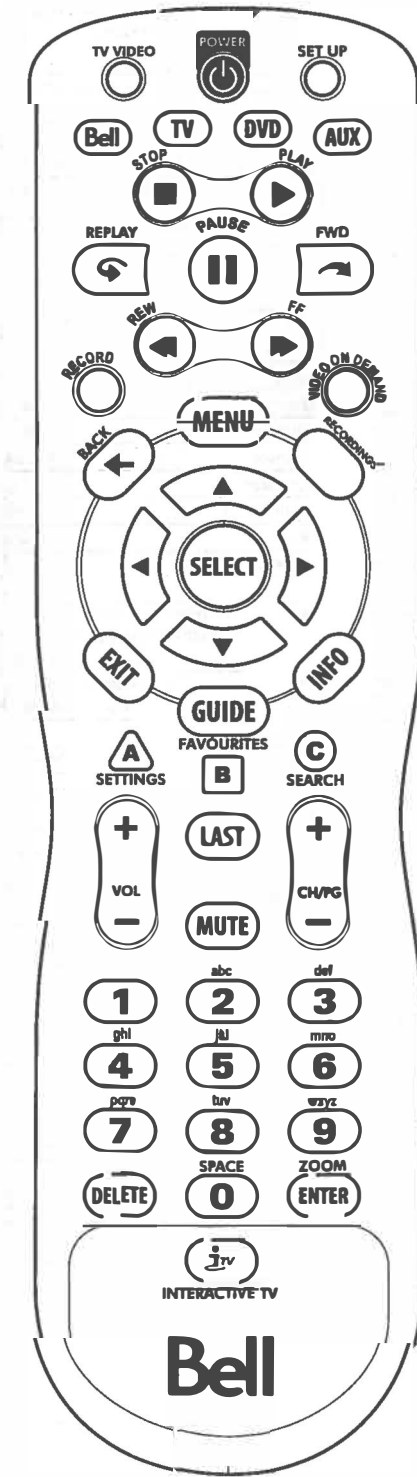

Guide de la télécommande Bell Télé Fibe™ Fibe™ TV Remote guide



Fibe est une marque de commerce de Bell Canada.

INSTALLATION DES PILES

- Retirez le couvert situé à l'arrière.
- Insérez deux nouvelles piles alcalines AA.

PROGRAMMATION DE LA TÉLÉCOMMANDE POUR CONTRÔLE R D'AUTRES APPAREILS

La télécommande contrôle uniquement l'appareil qui a été sélectionné par la touche de mode appropriée (TV, DVD et AUX). Vous n'avez pas besoin de programmer la télécommande pour contrôler votre récepteur Télé Fibe.

Pour utiliser votre télécommande avec d'autres appareils, vous devrez configurer les touches pour les modes TV, DVD et AUX afin d'être en mesure de contrôler ces appareils (section A).

Veuillez vous référer à la liste des codes au verso de ce guide pour connaître le nom des marques et modèles compatibles. Si la marque de votre appareil ne se trouve pas sur la liste, consultez la section B pour découvrir la fonction de recherche.

NOTE : La touche de mode TV doit être configurée avec les codes de téléviseurs. La touche DVD doit être configurée avec les codes DVD et Blu-Ray et la touche AUX doit être configurée avec les codes Audio.

A. CONFIGUREZ LES COMMANDES DU TÉLÉVISEUR, DU LECTEUR DVD OU D'UN APPAREIL AUDIO À L'AIDE D'UNE ENTRÉE DE CODE DIRECTE

- Allumez l'appareil que vous souhaitez contrôler.
- Pour contrôler le téléviseur, appuyez sur la touche TV et appuyez ensuite sur la touche SET UP jusqu'à ce qu'elle clignote deux fois. Pour un lecteur DVD ou un appareil audio, appuyez sur la touche DVD ou AUX selon l'appareil que vous voulez configurer. Ensuite, appuyez sur la touche SET UP jusqu'à ce qu'elle clignote deux fois.
- À partir de la liste de codes située au verso de ce guide, inscrivez le premier code de la marque de votre appareil.

Problème : J'ai essayé tous les codes pour la marque de mon appareil, mais aucun ne fonctionne.

Solution : Essayez la RECHERCHE DE CODE (Section B) ou visitez le www.ursupport.com pour une recherche par modèle.

B. RECHERCHE DE CODE

- Appuyez et tenez la touche SET UP jusqu'à ce qu'elle clignote deux fois.
- Appuyez sur la touche pour l'appareil que vous désirez configurer (TV, DVD ou AUX). La touche restera allumée.
- Appuyez et tenez la touche SELECT.
- Relâchez la touche SELECT quand votre appareil s'éteint.

C. CONTRÔLE DU VOLUME

Les commandes du volume contrôleront votre récepteur Bell Télé Fibe. Si vous préférez qu'elles contrôlent votre téléviseur ou un autre appareil, suivez les étapes ci-dessous:

- Appuyez et tenez la touche SET UP jusqu'à ce qu'elle clignote deux fois.
- Appuyez sur la touche de VOLUME +.
- Appuyez sur la touche (Bell, TV, DVD ou AUX) qui correspond à l'appareil que vous utilisez pour contrôler le volume. Notez que cette touche doit déjà être programmée pour contrôler votre appareil.

D. DÉPANNAGE

Problème : La touche de mode ne clignote pas quand une touche est appuyée.

Solution : Remplacez les piles.

Problème : La touche de mode clignote, mais la télécommande ne contrôle pas mon équipement.

Solution : Appuyez sur la bonne touche et pointez la télécommande vers l'équipement que vous désirez contrôler.

BATTERY INSTALLATION

- Remove cover on back.
- Insert 2 new AA alkaline batteries.

PROGRAMMING THE REMOTE TO CONTROL OTHER DEVICES.

The remote will only control a device that has been selected by the appropriate mode key (TV, DVD, and AUX).

You do not need to program the remote to operate your Bell Fibe TV receiver.

To use your remote for other devices, you will need to setup the TV, DVD and AUX mode keys to control the devices (Section A).

Refer to the code list on the back of this guide for a list of supported brands and models. If you do not find the brand of your device, refer to section B for the search function.

NOTE The TV mode key can only be setup with TV codes. The DVD key can only be setup with DVD, Blu-Ray and VCR codes. The AUX key can only be setup with Audio codes.

A. SETUP TV, DVD AND AUDIO DEVICE CONTROL USING DIRECT CODE ENTRY

- Turn on the device you want to control.
- To set up the remote to control a TV, first press the TV mode key, then press the SET UP key until the TV mode key blinks twice. For a DVD player or audio device, press and hold the DVD or AUX mode key for the device you want to setup, then press and hold the SET UP key until the DVD or AUX mode key blinks twice.
- From the list of codes on the reverse side, locate the code for your brand and enter the first code.
- Press the power button; if the device turns off, setup is complete.
- If the device does not turn off, repeat the process using the next code listed for your device brand.

B. CODE SEARCH

- Press and hold SET UP until the mode key blinks twice.
- Press the mode key (TV, DVD or AUX) for the device you want to set up. The mode key will stay lit.
- Press and hold down the SELECT key.
- Let go of the SELECT key when your device turns off.

C. VOLUME CONTROL

The volume controls will control your Bell Fibe TV receiver. If you would prefer they control your TV or another device, please follow these steps:

- Press and hold SET UP until the mode key blinks twice.
- Press VOLUME + key.
- Press the mode key (Bell, TV, DVD, AUX) that corresponds to the device you want to control the volume of. Please note that this mode key must already be programmed to control your device.

D. TROUBLESHOOTING

Problem: Mode key does not blink when a key is pressed.

Solution: Replace batteries.

Problem: Mode key blinks, but remote does not control my equipment.

Solution: Press correct mode key and point the remote at the equipment you would like to control.

Problem: You have tried all codes for your brand of device and none work.

Solution: Try CODE SEARCH (Section B) method or go to www.ursupport.com for model-based search.

Problem: The mode key flashes five times every time I press a key, but everything works normally.

Solution: The batteries in the remote are weak; please replace them with two new AA batteries.

LISTE DES CODES CODE LIST

Télé / TV

Action	0873
Admiral	0093 • 0463
Advent	0761 • 0783 • 1933
Aiko	0092
Awea	1362
Akai	0812 • 1675 • 0702 • 0765 • 0030 0672 • 1207 • 1385 • 1935 • 2232
Akura	1687
Albatron	0843
Al de	0672
America Action	0180
Anam	0180
AOC	0030 • 1365 • 1589 • 1590 2014 • 2087 • 2402 • 2479
Aomni	1623
Apex Digital	0748 • 0879 • 0765 • 0767 0890 • 1217 • 1992 • 2397
Audimax	0180
Audiovox	1564 • 0451 • 0180 • 0092 0623 • 0802 • 0846 • 0875 1284 • 1766 • 1769 • 1803 1865 • 1937 • 1951 • 1952 • 2121
Aventura	0171
Axion	1937
Baysonic	0236 • 0463 • 0180
Bell & Howell	0154
BenQ	1032 • 1315 • 1756
BGH	0876 • 0898
Blue Sky	1254
Boigie	1696
Bradford	0180
Brilliant	1037
Broksonic	0236 • 0463 • 1935 • 1938
Byg Sign	1309
Candle	0030 • 0056
Carnivale	0030
Carver	0054
Casio	1205
CCC	0037 • 0623
Celebrity	0000
Celero	0765
Champion	1362
Changhong	0765
Cineral	0451 • 0092
Citizen	0451 • 0060 • 0030 • 0092 0056 • 0561 • 1672 • 1935
Clarion	0180
Coby	1538 • 1634 • 2306 • 2314 2315 • 2338 • 2340 • 2343 2344 • 2345 • 2350 • 2500 • 3202
Commercial Solutions	1447 • 0047
Concerto	0056
Comia	1687
Contec	0180
Continental	2357
Coradif	2844
Craig	0180
Croma	1011
Crosley	0000 • 0054
Crown	0180 • 0672
Crown Mustang	0672
Curtis	1200 • 1326 • 2352 • 2397 • 2466
Curtis Mathes	0047 • 0054 • 0154 • 0451 0093 • 0060 • 0702 • 0030 • 0185 0166 • 1661 • 0056 • 1147 • 1347 • 1959
CXC	0180
Cytron	1326
Daemnyx	0180 • 0672
Daewoo	0154 • 0451 • 0092 • 1661, 0623 • 0661 • 0672 • 1816
Daytron	0180
Dell	1264 • 1080 • 1178 • 1863
Denon	0145
Diamond Vision	1997
Digitizer	1565
Digital Lifestyles	1765
Disney	1665 • 2152
Dreon	0037
DSE	1565
Dumont	0017
Durobrand	0463 • 0180 • 0178 • 0171 1034 • 1463 • 1665
Dynex	1463 • 1785 • 1810 • 2049 • 2184
Electrobrand	0000
Electrograph	1755 • 1623

Electrohome	0463 • 1670 • 1672
Elektra	0017 • 1661
Element	1687 • 1886 • 2183
Emerson	1864 • 0154 • 0451 • 0236 0463 • 0180 • 0178 • 0171 1661 • 0623 • 1394 • 1665 1886 • 1944 • 1963 • 1978
Empress	1422 • 1765
Encross	0876
Envision	0030 • 0813 • 1365 • 1589 2014 • 2087
Epson	1122
ESA	0812 • 0171 • 1944 • 1963
Firstline	0037
Fisher	0154 • 1362
Fluid	2964
Fujimaro	1687
Fujitsu	0809 • 0683 • 0853
Fujitsu Siemens	0809
Funai	0000 • 0180 • 0171 • 1271, 1904 • 1963 • 1979
Futuretech	0180
Gateway	1755 • 1756
GE	1547 • 1447 • 0047 • 0051 • 0451 0765 • 0178 • 1347 • 1922 • 2359
General Electric	0047
GFM	1864 • 0171 • 1665 • 1886 • 1963
Gibraltar	0017 • 0030
Global Home	1565
Go Video	0086
GoldStar	0178 • 0030 • 0037 • 0056
Gradiente	0053 • 0056
Grundig	0037 • 0070 • 0672 • 0683
Grundy	0876 • 0898
H & B	1366
Haier	1034 • 1748 • 1749 • 1753 2293 • 2309 • 2494 • 3204
Hallmark	0178
Hanns G	1783
Hanspree	1348 • 1745 • 1783 • 2786
Harley Davidson	1904
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Hellos	0865
Hello Kitty	0451
Hewlett Packard	1494 • 2540
Himitsu	0180
Hisense	0748 • 1314 • 1660 • 2098 2355 • 2419
Hitachi	1643 • 1145 • 0145 • 0056, 0679 • 0797 • 1345 • 1445, 1904 • 2215 • 2431 • 2433
Hitech	1814
HP	1494 • 2540
Hyundai	0849 • 1219 • 1814
I-Inc	1746
I-La	1463 • 1286 • 1394 • 1603, 1665 • 1684 • 1990
In_nity	0054
Initial	1603 • 1990
Innova	0037
Isignia	1423 • 1564 • 0463 • 0171 • 2751 2432 • 2184 • 2088 • 2049 • 2002 1963 • 1892 • 1810 • 1785 • 1640 1641 • 1517 • 1385 • 1326 • 1204
Inteq	0017
ITT	0451 • 1661
ITX Nokia	0180
IX	0877
JBL	0054
JCB	0000
JCM	2256
Jensen	0761 • 1299 • 1326 • 1933
JVC	0463 • 0053 • 0650 • 0731 • 1253 1601 • 1774 • 1923 • 2264 • 2271
KDS	1687
KEC	0180
Ken Brown	0236 • 0463 • 1321
Kena	1766 • 1763 • 1762 • 1687 • 1565
Kenwood	0030
Kiota	0054
KLH	0765 • 0767
Konika	0463
Kost	1262 • 1863
Kreiser	0876
KTV	0180 • 0030

LG	1423 • 1447 • 0017 • 1265 • 0178 • 0030 2834 • 2731 • 2424 • 2359 • 2358 • 2182 1993 • 1860 • 1859 • 1768 • 1721 • 1325 1778 • 0856 • 0056
Lloyd's	1904
Laewie	0087
Luxman	0056
LXI	0047 • 0054 • 0154 • 0156 • 0178
Lynx	1565
M&S	0054 • 0236
MAG	1687
Magnavox	1454 • 1866 • 1755 • 0054 • 0051 0030 • 0171 • 2372 • 1990 • 1963 1944 • 1904 • 1867 • 1525 • 1455 1365 • 1254 • 1198 • 0602 1454 • 0054 • 0030 • 0037 0704 • 0855 • 1398 • 1714
Matsumita	0250 • 0650
Maxent	1755 • 0762 • 1211 • 1714 • 1757
Megatron	0178 • 0145
Memorex	0154 • 0463 • 0150 • 0178 • 0877 1665 • 1670 • 1785 • 1892 • 1924 1927 • 1938
MGA	0150 • 0178 • 0030
Midland	0047 • 0017 • 0051
Mintek	1603 • 1990
Mitsubishi	1250 • 0093 • 0050 • 0178 0836 • 1797
Monivision	0843
Motorola	0030 • 0056
MTC	0060 • 0093 • 0056
Multitech	0180
Mx Ondo	1687
NAO	0156 • 0178 • 0037 • 0056 • 0866 • 1154
Nec	0030 • 0056 • 0704 • 0876 • 1398, 1659 • 2360 • 2402 • 2495
Netsat	0037
NetTV	1755 • 0762
NEX	1814
Nexus Electronics	2183
Nikko	0178 • 0030 • 0092
Nimbro	0180
Noblex	0154
Nokia	0180 • 0161
Norcent	0748 • 0824 • 1365 • 1589 • 1910 1591 • 1745 • 2120
Norwood Micro	1952
NTC	1026
Nu-Tec	2157
NuVision	2158
Olevia	1610 • 1144 • 1240 • 1331
Omwo	0180
Optimus	0250 • 0154 • 0166 • 0650 1924 • 1927
Optoma	1348
Optonica	0093
Orion	0236 • 0463 • 1463 • 1938
Otic	1687
Packard Bell	0092
Panasonic	1480 • 0250 • 0051 • 0650 1271 • 1291 • 1345 • 1924 • 1927 1941 • 1946 • 1947 • 2240 • 2264
Panavox	0861
PARK	1610 • 1144 • 1240 • 1331
Penney	0047 • 0156 • 0051 • 0060 0178 • 0030 • 1347
Petters	1523
Phico	0054 • 0451 • 0463 • 0030 0145 • 0171 • 0092 • 1661 • 0082 1271 • 1394 • 1665 • 1963
Philips	1454 • 1866 • 0054 • 0171 • 0037 0690 • 1394 • 1455 • 1483 • 1744 1806 • 1867 • 1961 • 2372 • 2374 • 2564
Pilot	0030
Pioneer	1457 • 0166 • 0679 • 0866 • 1260 1398 • 2240
Planar	1286 • 1589
Polaroid	1523 • 0765 • 2425 • 2121 • 2127 2063 • 2002 • 1992 • 1769 • 1767 1766 • 1763 • 1762 • 1687 • 1565
Portland	0451 • 0092 • 1661
Precision	1792
Primo	0761 • 0783 • 1749 • 1753 1785 • 1933
Prism	0051
Proscan	1447 • 0047 • 0030 • 1347 1922 • 2147 • 2183 • 2256
Proton	0178
Proview	0086

Pulsar	0017
Punktal	2687
Pye	0412
Pyle	1200
Quasar	0250 • 0051 • 0650 • 1291 1924 • 1927
RadioShack	0047 • 0154 • 0180 • 0178 0030 • 0056 • 1904
RCA	1547 • 1447 • 0047 • 0051 • 0093 0060 • 1661 • 2932 • 2746 • 2434 2247 • 2187 • 2002 • 1959 • 1958 1953 • 1922 • 1781 • 1347 • 1147 • 0679 0866 • 1147 • 1156 • 1347
Realistic	0154 • 0180 • 0178 • 0030 • 0056
RevolutionHD	1623
Runco	0017 • 0030 • 1028
Sampo	1755 • 0030 • 0762
Samsung	0812 • 0060 • 0702 • 0178 0030 • 2814 • 2697 • 2596 • 2137 2103 • 2051 • 1959 • 1060 • 0814 0766 • 0650 • 0056 • 0037
Sansei	0451 • 0092
Sansui	0463 • 0171 • 1463 • 1409 1670 • 1892 • 1904 • 1935 • 1938
Sanyo	0054 • 0154 • 1142 • 1362
Sceptre	0878 • 1217 • 1360 • 1599 2337 • 2566
Scotch	0178
Scott	0236 • 0180 • 0178 • 1711
Sears	0047 • 0054 • 0154 • 0156 0178 • 0171 • 0056 • 1007 • 1904
Semivox	0236 • 0463 • 0180
Semp	0156 • 1356 • 1743
Sense	1865
Serie Dorado	0156 • 0180 • 0178
Sharp	0818 • 0093 • 1459 • 1602 1659 • 2360 • 2402 • 2495
Sheng Chia	0093
Sherwood	1399
Siam	0037
Signature	0054
Signet	1262
SIY	1799
Skywarth	2104
Sole	1366 • 1483 • 1623 • 2075
Sony	0810 • 0000 • 1685 • 1825 1904 • 1925 • 2736
Soundesign	0180 • 0178
Sova	1952
Soyo	1746 • 1824
Space Tek	1696
Spectranix	1687
Squareview	0171
SSS	0180
Starlite	0180
Studio Experience	0843
SunBriteTV	1420 • 2337
Superscan	0093 • 0864 • 1944
Supersonic I	753 • 2104 • 3204
Supreme	0000
SVA	0748 • 0865 • 1963
Sylvania	1864 • 0054 • 0030 • 0171 • 1271 1314 • 1394 • 1665 • 1886 • 1944 • 1963
Symphonic	0180 • 0171 • 1394 • 1904 • 1944
Syntax	1610 • 1144 • 1240 • 1331
Tahoci	0561
Talent	0178
Tandy	0093
Tatung	1286 • 1288 • 1361 • 1756 • 2496 2414 • 2434 • 3183
Technics	0250 • 0051
Techwood	0051 • 0056
Tekniko	0054 • 0180 • 0150 • 0040 0092 • 0056
Telefunken	0702 • 0056
Thomas	1904
TMK	0178 • 0056
TNCI	0017
Tophouse	0180 • 0672 • 1385
Toshiba	1524 • 0154 • 0156 • 1256 • 0093 1265 • 0060 • 2724 • 2006 • 1959 1945 • 1936 • 1935 • 1743 • 1704 1656 • 1